Since 1968



User Manual COLOR VIDEO SLAVE PHONE CAV-70MGX+



www.commax.com

COMMAX Co., Ltd.



- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

Index

1.Introduction ····· 1.1. Product component·····	4
1.1. Product component·····	4
1.2. Screen composition ······	4
1.3. Wireless network connection	5
1.4. Sign up	…6
1.5. Using Smartphone ·····	··7
2.Home screen	9
2.1. Screen composition ·····	9
2.2. Edit space background	10
2.3. Place/Delete device icon on home screen ·····	10
2.4. Place/Delete widget on home screen ·····	11
2.5. IoT Device connection23 ·····	11
2.6. Place/Delete apps on home screen ·····	11
3.Call ·····	12
3.1. Entrance Call	13
3.2. Guard Call ·····	14
3.3. Call log ·····	15
3.4. Receive a call via Smartphone	15
4.Security	16
4.1. Emergency ·····	
4.2. CCTV	17
4.3. Emergency record	18
4.4. Emergency test ·····	18
5.Control	20
5.1. Lighting control	20
5.2. Checking multi-sensor	20
5.3. Magnetic sensor monitoring	21
5.4. Adding devices	21
5.5. Edit device	22
6.Scenario/schedule setting	23
7.Convenient function	29
7.1. Calculator	29
8.Setting	30
8.1. Environment set up ····· 8.2. Password change ·····	30
8.2. Password change	30
8.3. Receive a call via Smartphone 8.4. Firmware update	31
8.4. Firmware update	31
8.5. Connect to COMMAX	31
8.6. General setting	32
8.7. Wireless network connection 8.8. Screen setting	32
8.8. Screen setting 8.9. Language and key setting ·····	33
8.9. Language and key setting	33
8.10. Date and time setting	34
9.Appendix	35
9.Appendix 9.1. Wireless device Registration/Disconnection	30
9.1. Wireless device Registration/Disconnection	30
9.2. Installation 9.3. Wiring Diagram and Components ·····	43
9.3. Wiring Diagram and Components	44
ту, респісацин	40

Warnings and caution

Please follow the things described below in order to prevent any danger or property damage.



5cm

Prohibition

Prohibition Electric shock

0

Prohibition Electric shock

Prohibition

2



COMMAX

1. Introduction

1.1. Product component



1.2. Screen composition

The bottom button of home screen

1.3. Wireless network connection

Press the 'Setting' button for setting screen.



Wi-Fi On/Off

Setting \rightarrow Wi-Fi Click the check box to turn on or off Wi-Fi.

Wi-Fi Connection

Setting → Wi-Fi setting

You can search surrounding network and connect to selected wireless network.

Select the Wi-Fi from the network list of auto-discovered and enter the password to connect network if necessary. If protected Wi-Fi with lock, the password need to be entered to use the Wi-Fi.

Add Wi-Fi directly

When the Wi-Fi you want is not discovered, you can add it entering the Wi-Fi information directly to the list.

Select "Add Wi-Fi network" at the bottom of Wi-Fi list.

Enter SSID of network, select security type, enter the password and select EAP way. The different information is shown according to the security type.

Disconnect Wi-Fi

Not to connect the previous Wi-Fi automatically, initialize registered network information. First, select connected Wi-Fi and select Don't save. Then, the Wi-Fi will be disconnected and the previous connect information is initialized.

1.4. Sign up



Sign up

Sign up



1) Select 'Sign up' button.



- 2) Enter 'ID' and select 'Duplication check' button.
- 3) Select your country.
- Enter 'Password' and 'Retype Password' and select 'Registration' button.



5) Your sign up is completed.

Edit, Initialize

- 1) If your ID is registered, your information will be shown. To change the password, select 'P/W Change' button..
- 2) If you want to delete your ID, select 'Initialization' button.
- %f To receive a call and control the device via Smartphone app, Sign up is necessary.
- % f $\,$ To sign up, the internet access is necessary.

1.5. Using Smartphone

Access Smartphone





- 1) Run 'IP Home IoT'app.
- 2) Enter 'ID' and 'Password' and press 'Login' button.

- 3) Click 'Call' button to make a call.
- 4) When you click 'Refuse' button, the call is disconnected.





5) When the call is connected, the entrance screen is shown.



← Enter password to open door

Please be careful because doors open by user's carelessness can cause property damage. Please enter Wallpad's password.



- If you press 'Open Door' button, a warning message will be displayed. If you click 'Cancel' button, the popup window will close.
- 7) Enter the password registered in wall pad and press 'OK' button to open the door.

2. Home screen

2.1. Screen composition



Entrance	Entrance monitoring, Visitor communication
Call log	To check Call log
Emergency	Home emergency button
APPs	All installed apps list



%f If you press and hold the home screen for about 1 second, you will get a menu that allows you to perform "Edit space / Device layout / Add device / Widget layout / App layout".



2.2. Edit space background



- 1) Press and hold the Home screen for about a second.
- 2) Click the 'Space Background' button.
- 3) Select the background picture to use.
- 4) Enter a space name.
- 5) Press 'OK' button to save the background. Press 'Close' button to cancel editing.

2.3. Place/Delete device icon on home screen



- 1) Press and hold the Home screen for about a second.
- 2) Click the 'Place icon' button.
- 3) You can place the device icon on the home screen by pressing and holding.
- 4) On the home screen, press and hold the icon to delete will be deleted when moved to the trash.

2.4. Place/Delete widget on home screen



- 1) Press and hold the Home screen for about a second.
- 2) Click the 'Widget' button.
- 3) Long press on the widget to place it on the home screen.
- 4) On the home screen, touch and hold the widget to delete will be deleted when moved to the trash

2.5. IoT Device connection



- 1) Press and hold the Home screen for about a second.
- 2) Click the 'IoT Device connection' button.
- 3) Connect each device according to the device pairing method. (It can be up to 60 seconds.)
- 4) Press the 'Cancel' button to cancel the pairing connection.
- 5) When the device is registered, the device is automatically placed on the home screen.

2.6. Place/Delete apps on home screen

- 1) Press and hold the Home screen for about a second
- 2) Click the 'Apps' button.
- 3) Tap and hold the icon of the app you want to place on the home screen.
- 4) On the home screen, touch and hold the icon of the app you want to delete to move it to the trash, and the app icon will be deleted.



3. Call



Call connection screen and call screen

① Activation and waiting call display	(5) Receive a Call
 Setting the front door of our house 	6 Call rejection, cancellation
③ Connection screen	⑦ Open the door
④ Call volume and volume control	(8) Store visitor video
	 Store visitor foto

% Call reception screen differs depending on the type of door call, security call, etc.



21 Entrance Call



Monitoring of my house entrance

Monitor and call my house entrance

- 1) You can monitor the entrance of our house by pressing the door icon or by pressing the 'door' button on the dial screen.
- 2) Press the "Cancel call" button to cancel monitoring.
- 3) If you want to talk during monitoring, press (call) button
- 4) Press the "End call" button.

Common entrance monitoring and calling

- 1) Press the "door" icon.
- 2) Select the number of common porches to monitor.
- 3) 'Common entrance' button can be pressed to monitor the common entrance.
- 4) Press the "Cancel call" button to cancel monitoring.
- 5) If you want to talk during monitoring, press (call) button
- 6) Press the "End call" button.

Open the door of my house

- 1) Press the 'Open Door' button during a call.
- 2) Open the door.

Open common entrance door

- 1) Press the 'Open Door' button during a call.
- 2) Open the door.

Saving the image of our house / common entrance visitor

- 1) Press the 'Record' button during a call or a call.
- 2) You will see a photo of the visitor on the home screen if it successfully saved.





Setting my home screen

- 1) Press the 'entrance' button on the phone screen.
- 2) Press the 'Screen Settings' button.
- 4) Press \mathbb{C} 'Reset' button to change to initial screen .

 $\ensuremath{\mathbb{X}}$ The screen settings can be set only when monitoring the door.

0	•	•	0

[Setting my house entrance screen]

Receive a call at our house / common entrance

- 1) Visitor screen are displayed on the wall pad with bell sound, when you receive a call.
- 2) Press the (Talk) button to connect the call and press the (Talk reject) button to reject the call.
 3) Press the (End Call) button to end a call

3.2. Guard Call



Call guard station

Call guard station

- 1) Click on the 'guard room' icon to call the guard room.
- 2) Press the 'guard' button to call the guard..
- 3) Press the "End call" button, to end the call.

Receive call from guard station

- 1) You will see a guard station with bell sound on the wall pad, when you receive a call.
- 2) Press the 💟 (Talk) button to connect the call and press the (Talk reject) button to reject the call.
- 3) Press the (End Call) button to end a call

※ The call ends automatically, if you use the call transfer during a call



3.3. Call log

Call log Call Type Make a call



Call log screen

Use call logs

- 1) You can press 💊 the button from the call log and connect the call .
- You can clear the call history by clicking the trash button at the top of the screen and pressing the 'OK' button

3.4. Receive a call via Smartphone



Wall pad screen when Smartphone call is connected

- 1) The image of visitor displayed on screen with a ringing bell.
- 2) Press the "Call" button if you want to make a call and press the "Reject" button to reject.
- 3) Press 'Exit' to end the call..
- 4) The wall pad will be provided a message "the wireless device is calling" when you make a call connection with your Smartphone".

15

4. Security

4.1. Emergency



Emergency Emergency detection

An emergency situation occurs when the emergency button is pressed. Emergency situation is proceeded in three steps (occurrence \rightarrow stop \rightarrow return).

Emergency situation occurs

 You can make an emergency by pressing the emergency icon or by pressing the emergency button on the front of the product. Emergency type is displayed at the top of the screen and a siren sound is generated



Emergency stop

- 1) Press the 'Stop' button at the bottom of emergency alert screen.
- 2) Enter the password (initial password: 1234) when you see the password screen.



Password input

Emergency Return

- 1) The button at the bottom of the screen changes to 'Return' if the password is matched.
- 2) Press the 'Return' button at the bottom of the screen.
- 3) Emergency situation is stopped, when the emergency returns.



4.2. CCTV



1

2

3

Checking CCTV video Save images



Viewing and saving CCTV images

- 1) Select the DVR (③) you want to watch and press the channel list (④) to display the connected CCTV list (⑤).
- 2) If you click on the desired CCTV list, it will be displayed on the CCTV video screen.
- 3) Press the 'Save' button to save the desired screen.
- 4) You can check the saved image by pressing the image view (6).

4.3. Emergency record



Emergency record



Delete emergency records

1) You can delete emergency records by clicking the trash button at the top of the screen and then pressing the 'OK' button.

4.4. Emergency test



Fire emergency test Gas Emergency Test

You can test the emergency situation by pressing the emergency test button. Emergency test situations will only occur on the wall pad and will not be notified to the smartphone and guard.

Emergency test

- 1) You can make an emergency by pressing the emergency button (fire / gas emergency) you want to test.
- 2) Emergency type is displayed on the screen and a siren sound is generated.





Test emergency screen



1) Fire emergency screen

2) Gas emergency screen

Test emergency stop

- 1) Press the 'Stop' button.
- 2) Emergency test is ended.

19

5. Control

5.1. Lighting control

- 1) Go to the Lighting tab.
- 2) When you press power button of whole lightings, all lightings are turned on.
- 3) When you press power button of whole lightings, all lightings are turned off.
- 4) Press the power button of the lighting you want to control to turn the light on or off.



5.2. Checking multi-sensor

- 1) Go to the Indoor Environment tab.
- 2) Displays information collected in indoor environment by multi-sensor.



[Multi-sensor screen]



5.3. Magnetic sensor monitoring

- 1) Go to the Safety tab.
- 2) 'Detected' is displayed when door open is detected.
- 3) If no door open is detected, "No detected" is displayed.



[Magnetic sensor screen]

5.4. Adding devices

- 1) Press the + button to enter the Add Device mode.
- 2) Pairing mode is for 1 minute.







5.5. Edit device

Change the device nickname

- 1) Select the device and change the nickname.
- 2) Press 'OK' and then the name of device is changed.

÷	Edit Device	d ~
	Select device and change the name.	
Light		
Mainswitch		
Light 01		
Light 02		
Light 03		

[Device edit screen]

Remove device

- 1) Press the "Trash" button.
- 2) Select the device you want to delete.
- 3) Press the 'Finish' button to delete the device.



[Remove device screen]



6. Scenario/schedule setting



[Scenario/schedule control screen]

① Go to home screen	③ Scenario view detail
② Scenario addition	④ Go to scenario control

6.1. Scenario addition

- 1) Press "Add Scene" button on "Add Scene Main Screen.
- 2) The device selection dialogue window will be displayed, if you click 'Create scene '.
- 3) Select the device to set and press the OK button on the upper right corner.
- 4) Select the device attribute and set the device.
- 5) Click the 'Enter Name button' at the top of the screen and then set the name and icon.



[Device attribute setting screen]



[Name and Icon setting screen]

23

6.2. Away mode



Away mode on/off Away setting status display

When you go out, you can set security sensor, visitor video auto save etc.

Running Away mode

- 1) Press the Away icon to set the away mode.
- 2) The away mode will be executed automatically after the specified away delay time.
- 3) Press the 'Close' button to cancel the away settings.

×	Scene	+
Away Security		
	Setting time of Away delay	1min
	Setting time of Returning	20sec
Away	Area 01 (2)	Off
Edit Run	Door Sensor Group	On
	PIR Sensor Group	On
[A	wav mode screen!	

① Away delay time	③ Start away mode
② Items to be run when out	

※ If you are setting the security mode, away settings will not be executed.

% Away delay time is the time set by Away Setting \rightarrow Option \rightarrow Away Delay Time.

Setting the away mode

- 1) Set items to be performed when going out.
- 2) Press the 'Option' button on the away setting screen to display the setting status.
- 3) Check the security sensor and execution item to use.
- 4) Click the OK button to save.

\times	Away option	
Setting time of Away of	delay	1min
Setting time of Return	ing	20sec
Area 01		
Door Sensor Group		
PIR Sensor Group		
Vieitore nictura etorar	50 C	

[Away mode setting screen]

Turn off Away mode

- 1) On the Scene screen, press the Away setting button.
- 2) If password input screen is displayed, enter password and press 'OK' button.
- 3) When password is matched, Away mode is canceled.

6.3. Security mode

Security mode on/off

Security setting status display

- %f This function is implemented when a security sensor is installed in a household.
- %f Sensor usage setting can be set in [Setting> commax connection> Sensor use selection].

Security mode setting

- 1) Check the security sensor to set by pressing the 'Security Zone (2)' button.
- 2) Press the 'Apply (①)' button to activate the security sensor in the designated zone.



[Security Setting Screen]

% The number of images in the security setting sensor is displayed by the number of sensors set.

25

Turn off security mode

- 1) Press the 'Security' button.
- 2) When the password input screen is displayed, enter the password and press 'OK'.
- 3) If the password matches, the security mode is canceled.

6.4. Scenario Control



- 1) Click the scene you want to execute from the list.
- 2) The set device is controlled collectively.
- Control Scenery / Scenario Press 'Detail View' button on the main screen.
- Press 'Run' button to control the set devices in batch.



- 'Press the 'Security: Apply>' button to enable or disable security for the scene.
- 2) Press the 'Edit' button to edit the scene.
- You can add and edit device type, device attribute, scene name and icon on the edit screen.

6.6. Scenario Control setting (Mode)

You can perform the desired operation according to the conditions set by the scenario control.

예) Turn off the living room light when you go out

※ Depending on the server status, the control time may take from about 1 minute to a maximum of 5 minutes.

6.7. Adding Scenario Controls



Click the 'Scenario Control' button on the top right.

Click the 'Create Scenario Control' button or the '+' button in the upper right corner.

Press the '+' button on the upper right of 'Condition'.

) Select the device to be set.



Add an item Add an item Unser terms to include in the score	Condition Setting Door Sensor 01 State Connect	5)6)7)	Select the item of the selected device. Press the " button on the upper right corner to save Set 'Execution Item' setting 4)~ 6) as same as 'Condition'.
X If (Condition) M Door Sensor 01 Ender Opened	Add Scenario Run (Action) Light 01 Piewer Do.	8) 8)	When the setting of "condition" and "execution item" is completed, press " button on the upper right corner to save
Constant of the second	Scenario Control	+ 9)	The generated scenario control is displayed.

6.8. Setting whether to use reservation control



- .) Go to the reservation control screen.
- Use the toggle button ('
 ⁽) in the list to enable or disable the function to use.

7. Convenient function

7.1. Calculator



Arithmetic operation

You can use the arithmetic calculator function.



Calculator screen



8. Setting

8.1. Environment set up

You can set preferences such as user connection, language, and time.

1) Press the 'Set' button to display the setting screen.

⊕ % ©	💎 8:28 AM
Settings	
E Commax	User option
🕏 Wi-Fi 🛛 🗖	Connection
🕀 Sound	Ringtone
🌻 Display	
🛕 Language & input	Touch keypad sensitivity
① Date & time	About
	$(\textcircled{)}) (\overleftarrow{)})$

Settings Screen

8.2. Password change

Settings \rightarrow Commax \rightarrow User Options \rightarrow Password Change the password used for emergency release and exit mode setting cancellation.

- 1) Press the 'Password' button.
- 2) Enter the new password on the New Password Entry screen.
- 3) Enter the new password again.
- 4) If the entered password matches, the new password will be changed.

※ Initial password is 1234.

8.3. Receive a call via Smartphone

Settings \rightarrow Commax \rightarrow User Options \rightarrow Receive a call via Smartphone The smart device receives calls that come in Wallpad.

- 1) Check "Receive calls from smart devices" to receive calls via smart devices.
- 2) If unchecked, the smart device will not receive.
- ※ It can be used only when the external internet is connected.

8.4. Firmware update

Settings \rightarrow Commax \rightarrow User Options \rightarrow Firmware Update

Compare the system versions and update to the latest program.

※ It can be used only when the external internet is connected.

8.5. Connect to COMMAX

Settings \rightarrow COMMAX \rightarrow Connect

You can set up environment for connection and management such as Bld./House number information, sensor, door camera format.

Do not manipulate settings other than the installer. If the correct value is not entered, connection and management will not work correctly.

Building / House number setting

- 1) Press the 'Building/House number' button on the menu.
- 2) Enter the appropriate building and house number press the 'Save' button.

Using the sensor

- 1) Click the 'Sensor setting' button in the menu.
- 2) Check the sensor of the area to be used.
- 3) Press the 'Settings' button.

Sensor operation test

- 1) Click the 'Test Sensor' button.
- 2) When the sensor to be tested is operated, check mark is displayed.

Entrance camera video format setting

- 1) Press the 'Video Format' button.
- 2) Select the video format of the front door camera. (Contact installer)

Connection test

This is a feature for the installer. You can check if the product is connected to 'Home Server' or 'Local Server'. Click the "Test" button to confirm the access.

Initialize user data

- 1) Click the 'Initialize User Data' button.
- Press 'Reset Data' button to reset data such as 'Visitor Log', 'Visitor Image', 'Call Log', 'Emergency Log'
- 3) Data cannot be restored after initialization.

8.6. General setting

Setting the ring tone

Set up \rightarrow COMMAX \rightarrow Bell sound

- Select the location you want to set and then select the desired ring tone from the list. (Listening to the bell sound)
- 2) 'Press 'OK' button to set the selected ring tone.

Correct Touch screen

Settings \rightarrow COMMAX \rightarrow Touch screen

- 1) 'Press the 'touch screen' button.
- 2) Follow the on-screen instructions and press the cross icon in order.
- 3) When the correction is completed, the completion message is displayed.

Setting the touch keypad sensitivity

Settings → COMMAX → Keypad sensitivity Set the touch-button sensitivity of the product. ※ During the test, " Home " key will be activated.

8.7. Wireless network connection

Wi-Fi On/Off

Setting \rightarrow Wi-Fi You can turn on/off Wi-Fi.

Wi-Fi Connection

Setting \rightarrow Wi-Fi You can search for nearby wireless networks and select the wireless network you want to connect to. Select the Wi-Fi you want from the list of automatically discovered wireless networks, enter your password if necessary, and tap Connect. If you have secured Wi-Fi with a padlock, you'll need to enter your password before you can use it.

Add Wi-Fi manually

If the Wi-Fi you want does not appear in the list, you can enter your Wi-Fi information and add it to the list. Click the "+" button at the top of the Wi-Fi list to select Add Wi-Fi networks.

Enter the network SSID and select the security type to enter the password or select the EAP method and click Connect. The information depends on the type of security you choose.

Disconnect Wi-Fi

You can reset the network information that was previously connected or currently connected so that it is not automatically connected. Select the currently connected Wi-Fi and tap Do not save. The Wi-Fi connection is lost and the previous connection information is initialized.

8.8. Screen setting

Setting the screen brightness

Settings \rightarrow Display \rightarrow Brightness

- 1) Press Brightness.
- 2) The brightness window is displayed on the screen.
- 3) Use the left and right scrolls to adjust the brightness.
- 4) 'Click the 'OK' button to save the settings.

Setting the screen auto-off time

Settings \rightarrow Display \rightarrow Power saving Mode

- 1) Press Power Saving Mode.
- 2) A list of screen time limit is displayed.
- 3) Press the desired time to save the setting. If you press 'Cancel' button, it is not set.

8.9. Language and key setting

Change language

Settings \rightarrow Language and Keyboard \rightarrow Language You can set the language displayed on your device.

- 1) Click Language.
- 2) Select the language to set in the list.

8.10. Date and time setting

Settings → Date and Time

Setting the date and time automatically

1) Check the date / time automatic setting.

Setting the date and time manually

- 1) Uncheck the automatic setting of date / time.
- 2) The date and time setting items are activated.
- 3) Click Date set.
- If the date setting window is displayed on the screen, set the date using + and buttons, then press OK button.
- 5) Press the time setting to display the setting screen.
- 6) Set the time referring to the date setting.

Specifying the time zone

- 1) Tap the time zone.
- 2) Select the time zone of your current city from the list.

24-hour formatting

- 1) Check or uncheck Use 24-hour format.
- 2) When checked, the time is displayed as 24 hours. When unchecked, displays in 12-hour format.

Formatting dates

- 1) Press Select date format.
- 2) The date format selection window is displayed on the screen.
- 3) Click the format to set.



8.11. System information

You can check the components installed on your system and check the product firmware information.

Checking the component version

- 1) Click Applications.
- 2) The version of the installed component is displayed.

Checking product firmware information

The version and build number of the boot loader and kernel are displayed.

Specifications and Characteristics

- % Rated input: 100~240V~, 50/60Hz (Free Voltage)
- ※ Rated power consumption: 12W (Max)
- ※ Ethernet : 100Mbps

35
9. Appendix

9.1. Wireless device Registration/Disconnection

Standby power

Releasing the standby power switch



- Press and hold the red circle button on the smart socket for about 10-13 seconds, then release it if the LED is blinking.
- If the connection is successfully released, the LED will blink for about 5 seconds.

Registering the standby power switch



1) Press '+' button.



 Press the red circle button on the standby power switch for about 1 second. The LED will blink for about 4 seconds within 10 seconds.



2) The Add Device page is provided.



 When the registration is completed, "Device registered" message is displayed.

Light switch Releasing light switch



Registering the light switch



1) Press '+' button.



- Press the red circle button on the smart switch for about 10-13 seconds, and release the beep sound. Press the red circle button once more.
- When the release is completed normally, the LED will blink for 4 seconds and a "beep beep" sound will appear.



- 2) The Add Device page is provided.
- 3) Press the red circle button on the smart switch.
- If the connection is successful, LED will be on for 4 seconds and "beep" sound will be heard.
- 5) If the connection fails, the LED blinks for 4 seconds and "beep" sounds.
- When the registration is completed, the message "Device registered" is displayed.

37

Batch off 2 lights switch Releasing the batch off switch



Registering the batch off switch



1) Press '+' button.



- Press the red circle button on the batch off switch for about 10-13 seconds and release the beeping sound. Press the red circle button once more.
- When the release is completed normally, the LED will blink for 4 seconds and a "beep beep" sound will appear.



- 2) The Add Device page is provided.
- 3) Press the red circle button on the smart switch.
- If the connection is successful, LED will be on for 4 seconds and "beep" sound will be heard.
- If the connection fails, the LED blinks for 4 seconds and "beep" sounds.
- When the registration is completed, the message "Device registered" is displayed.

Gas valve controller

Releasing the gas valve controller



Registering the gas valve controller



1) Press '+' button.



- 1) Turn off the gas valve.
- Press the "+" button for about 5 seconds to provide "P" on the gas valve screen.
- Upon successful completion, the message "Device has been deleted" is displayed on the wall pad.



- 2) The Add Device page is provided.
- 3) Turn off the gas valve.
- Press the "+" button for about 5 seconds to provide "P" on the gas valve screen
- When the registration is completed, the message "Device registered" is displayed.

Gas leak detector

Releasing the gas leak alarm



Registering the gas leak alarm



1) Press '+' button..



- Press the button for about 10-13 seconds (located on the top of the product)
- 2) Release the button when LED flashed.
- Upon successful completion, the message "Device has been deleted" is displayed on the wall pad.



- 2) The Add Device page is provided.
- Press the button for about 10-13 seconds (located on the top of the product)
- Release the button when LED flashed. Press the button once more.
- Upon successful completion, the message "Device has been deleted" is displayed on the wall pad.

Magnetic door sensor

Releasing magnetic door sensor



Registering magnetic door sensor



1) Press '+' button.



- 1) Press the button for about 10 seconds.
- 2) Release the button when LED flashed.
- Upon successful completion, the message "Device has been deleted" is displayed on the wall pad.



- 2) The Add Device page is provided.
- 3) Press the button.
- When the registration is completed, the message "Device registered" is displayed.

PIR sensor Releasing PIR sensor



Registering PIR sensor



1) Press '+' button



- 1) Press the button for about 5 seconds.
- Upon successful completion, the message "Device has been deleted" is displayed on the wall pad.



- 2) The Add Device page is provided.
- When the PIR battery is installed, the red LED will blink for 30 seconds and try to connect.
- The red LED changes to green LED and turns OFF.
- When the registration is completed, the message "Device registered" is displayed.

9.2. Installation



* Note

- · Avoid installing the product in the area of direct sunlight.
- The position of the unit's body should fit the standard height range (Recommended height range is 1450 ~ 1500mm.)
- Avoid installing the product exposed to gas exposure, magnetic force, in humid temperatures, as it may damage the condition and performance of the product.



- Do not install a door camera in the area exposed to direct sunlight or backlight.
- · Please keep the lens clean for the clearest image reflection.

9.3. Wiring Diagram and Components



Precautions when wiring

1) When installing in the area where the high-voltage line passes around, use the coaxial wire to wire the metal pipe.

2) It may be short-circuited if internal wires are exposed due to scratches on the wire sheath, which may cause malfunction.

3) Turn off the monitor's power switch when connecting the monitor to the camera.

- 4) The wiring between camera and monitor is polarity.
- 5) When connecting various sensors, be careful about power and polarity..

Components



Wall bracket

for Monitor (1EA)



Manual (1EA)



(T)4x18mm (4EA) Wall bracket Mounting Screw

(M)3x6mm (1EA) Monitor fixing Screw

2P(2EA) / 9P(1EA) 3P(1EA) / 10P(1EA) 4P(1EA) Connectors



10. Specification

Model Spec.	CAV-70MGX+	
Wiring Q'ty	Common Area : 8EA / Individual Door : 4EA / RS-485 : 3EA (Network Boiler) Sensor : 6EA / DDL Open : 2EA / DDL Power : 2EA	
Power	AC 100 ~ 240V , 50~60Hz	
Power Consumption	Standby : 5W / Max. 15W	
Communication Method	Hands Free	
Sound	Individual Door : Electronic Chime with 3 Tones (For 2 consecutive times) Common Area : Electronic Bell	
Communication Range	Individual Door : 28m with $oldsymbol{\Phi}$ 0.5 Cable	
Operation Temperature	0 ~ +40°C (32°F ~ 104°F)	
Outside Size	181(W) X 245(H) X 32(D) mm	

WI-FI (IEEE 892.11 b/g/n)

Items	Specification	
Receiver sensitivity	-76dBm @ 802.11b 11Mbps	
	-65dBm @ 802.11g 54Mbps	
	-64dBm @ 802.11n MCS7	
Transmit power	17dBm @ 802.11b 1~11Mbps	
	15dBm @ 802.11g 54Mbps	
	14dBm @ 802.11n MCS7	
Frequency bands	2412MHz ~ 2472MHz	
Supply voltage Range	5V or 3V	

ZigBee

Items	Specification	Remark
Receiver sensitivity	-95dBm @ 1% PER	802.15.4 Section 6.5.3.3
Transmit power	+2.5dBm	
Z-Wave data rates	250kbps	
Frequency bands	2400MHz ~ 2485MHz	
Supply voltage range	2.0V to 3.6V	
RF Range	10~75m range	Less than 75m/1mW(0dBm)



COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea Int'l Business Dept. Tel. : +82-31-7393-540~550 Fax. : +82-31-745-2133 Web site : www.commax.com *PM0270MGX+10*

Printed In Korea / 2016.03.104